



E-mail......dnh@dnh.no


Web-site..... www.dnh.no


VEP-15(T)

ENGLAND DNH WW Ltd DNH GmbH

 <u>USA</u> DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

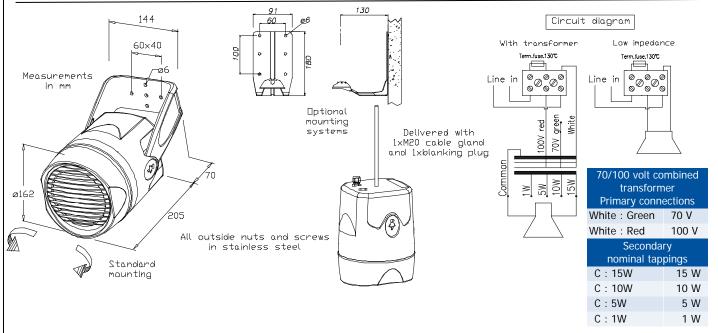

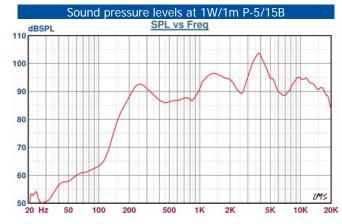

Specifications	
Material / Color	ABS / V0 / RAL7035
Mounting	Bracket
Termination	Ceramic terminal
Weight w/transformer	1,84 kg
IP-rating	55
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	15 W / 20 W
SPL 1W/1m	92 dB
SPL rated power	104 dB
Effective freq. range	140 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	151° / 47°
Directivity factor Q 1kHz/4kHz	2,4 / 7,7
Options	Impedance, colors, labels

Installation, Operation and Maintenance Procedures

- Fasten bracket with minimum two screws.
- To open the loudspeaker turn the front gently counter clockwise and pull.
- Lead cable through cable gland and connect to terminal.
- If 70V, replace red cable with the green cable in the terminal.
- To close the loudspeaker, align the two marks on the front and rear parts, and turn the front gently clockwise until it stops.
- Use the attached stop screw to secure the front from undesirable opening during operation. (Optional)
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with a two years warranty against defective workmanship