



yellobrik®

yellobrik®

Quick
Reference

RXT A200 Power Supply Holder for RPS A200




The RXT A200 is a holder for the RPS A200 external power supply. It can be mounted vertically or horizontally on the rear of a 19" bay and secures one RPS A200 unit. Use two RXT A200 holders when installing both main and redundant power supplies.

Technical Specifications

Size	186mm x 82mm x 52mm (7.3in x 3.2in x 2in) excluding bracket
Weight	285g (10oz)
Model #	RXT A200 (EAN# 4250479729780)
Includes	1x power supply holder, 1x mounting bracket, 4 screws

RXT A200 Power Supply Holder for RPS A200

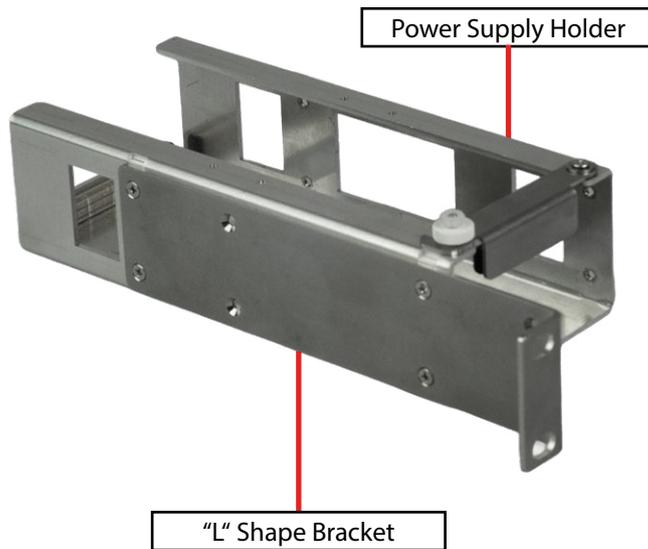

We are constantly adding more yellobrik modules.
Please visit our website for the latest product updates.

www.lynx-technik.com


Description

The RXT A200 is a power-supply holder designed for the RPS A200. It should be mounted directly to a 19" bay in close proximity to the yellobrik RFR 1200 rack frame. The holder streamlines cable management by securely fixing the external power supply, keeping installations clean and organized.


The RXT A200 accommodates a single RPS A200 power supply. It is composed of two components: a mounting bracket and the power-supply holder.

Mounting a RPS A200 in the RXT A200 Cage

Step 1: Unscrew and open the cage's retention lock.

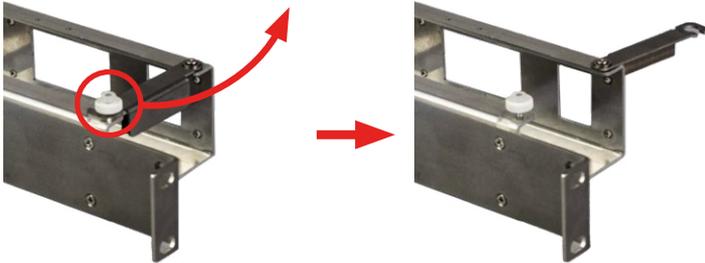

Step 2: Insert the power supply in the power supply holder and close the retention lock to keep the power supply secured within the RXT cage.

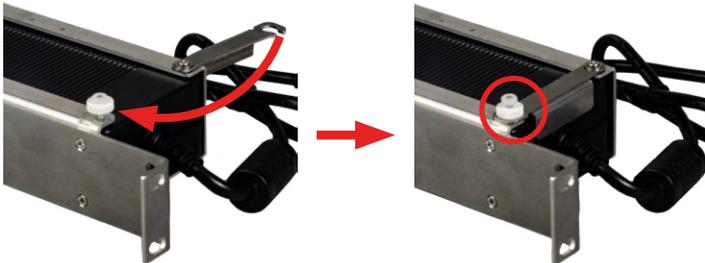

Mounting a RXT A200 in a Rack Frame

The RXT A200 is designed to be installed independently, not as a replacement for a rack ear of a rack frame. It is recommended that the RXT A200 is mounted on the opposing side of an RFR to utilize the full depth of the rack frame.

The RXT A200 can be mounted flushed with the frame or recessed if more room for the power cable is necessary. It fits within a height of 1.5RU.



Flushed Configuration



Recessed Configuration