 
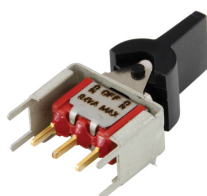 
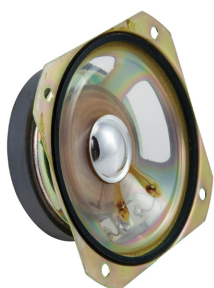 


Product Information Sheet

TECPRO INTERCOM SPARE PARTS

DESCRIPTION

All components are available as spares to order. However, certain items are often requested as replacement parts, and for convenience, these are listed here.

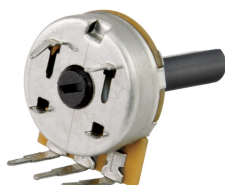

Code	Description
27-871	TECPRO Spare lamp for belt packs and MS series flash switch
27-872	TECPRO Spare lamp for LS3 series flash switch
27-879	TECPRO Spare potentiometer for belt pack volume control
27-878	TECPRO Spare potentiometer for HS and LS3 series volume control
27-881	TECPRO Spare button for belt pack flash switch
27-882	TECPRO Spare button for belt pack and MS series mic switch
27-883	TECPRO Spare button for MS series flash switch
27-884	TECPRO Spare button for PS711 channel switch
27-885	TECPRO Spare button for HS and LS3 series flash switch
27-888	TECPRO Spare knob for HS and LS series volume control
27-889	TECPRO Spare knob for belt pack volume control
27-891	TECPRO Spare flash switch for belt pack
27-892	TECPRO Spare mic switch for belt pack
27-893	TECPRO Spare flash switch for HS and LS3 series
27-894	TECPRO Spare mic switch for HS and LS3 series
27-895	TECPRO Spare loudspeaker switch for LS3 series
27-890	TECPRO Spare channel switch for PS711
27-898	TECPRO Spare loudspeaker for LS and MS series
27-899	TECPRO Spare rackmount kit for MS series
27-880	TECPRO Spare handle for MS series
27-897	TECPRO Spare belt pack belt clip
27-870	TECPRO Spare bezel for belt pack, black
27-092	TECPRO Spare bezel for belt pack, red
27-093	TECPRO Spare bezel for belt pack, orange
27-094	TECPRO Spare bezel for belt pack, yellow
27-095	TECPRO Spare bezel for belt pack, green
27-096	TECPRO Spare bezel for belt pack, blue
27-097	TECPRO Spare bezel for belt pack, violet